


GLOVE SIZE CHART

1. Place right hand flat on chart below, aligning saddle of index finger and thumb on the X

2. With your hand on the chart choose the sizing bar closest to the edge of your right hand

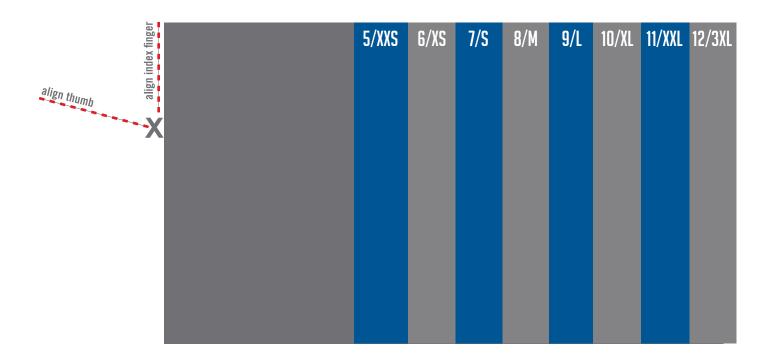

Washing instructions for all HexArmor® Products marked washable:

- Machine wash cold or warm, do not bleach
- Tumble dry low
- Secure all Velcro closures to prevent snagging
- For oily, greasy or carbon-based grime, Oxy-Clean has proven to work very well
- HexArmor products can be commercially cleaned as well





ARM GUARD SIZE CHART

Most arm guards are comparable to glove sizes. If you wear a large size glove, you will typically wear a large size arm guard. If you plan on wearing the arm guard over shirt sleeves, you may need to order one size larger. Measure around the widest part of your forearm, below the elbow. Make sure to measure over your clothes if you will be wearing the arm guard over your clothes.



AS019S

- 1. For bicep circumference measurement, measure around the widest part of your bicep, a few inches below the shoulder.
- 2. For wrist measurement, measure wrist circumference.

CIRCUMFERENCE	S	Μ	L	XL
WRIST	LESS THAN 19cm	19 – 22cm	22 – 24cm	GREATER THAN 24cm
	LESS THAN 7.5in	7.5 – 8.5in	8.5 – 9.5in	GREATER THAN 9.5in
BICEP	LESS THAN 42cm	42 – 44cm	44 — 46cm	GREATER THAN 46cm
	LESS THAN 16.5in	16.5 –17.25in	17.25 —18in	GREATER THAN 18in

